





► Audi A6 hybrid

2012 – 2015

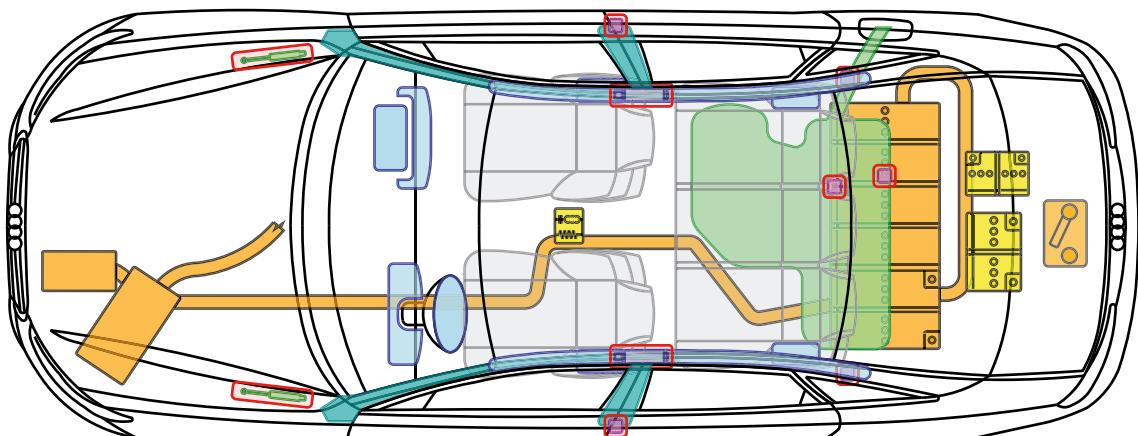

hybrid

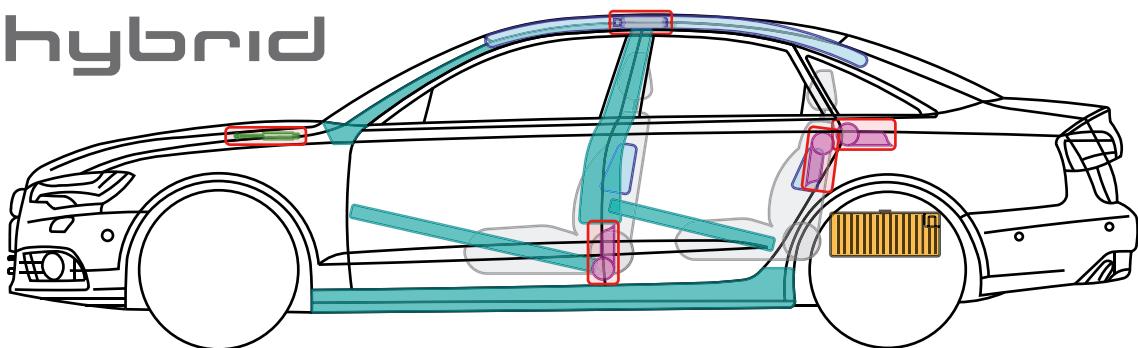

Legend

	Airbag		Reinforce- ment		Control module		High- voltage battery
	Gas generator		Rollover protec- tion		12 V battery		High- voltage -leads/ -components
	Preten- sioner		Gas- pressure damper		Fuel tank		High- voltage emergency disconnect



► Audi A6 hybrid

2012 – 2015

Identifying feature

The Audi A6 hybrid can be identified by means of the „hybrid“ logo and the orange cables in the engine compartment.



Engine compartment



Wing



Instrument cluster



Door sill trim strip


Hints

! In the case of accidents in which the airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags

- Place Vehicle in Park and set parking brake
- Switch off the ignition
- Disconnect the negative terminals of the 12 V battery if needed

Indempendently therefrom the high-voltage system can be deactivated by the Service-Disconnect. For this open the cover in the middle of the cargo floor in the trunk:

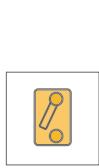

! The electric motor is silent!



It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on „OFF“ (for example on the „READY“ position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

Switch off the ignition



With the ignition switched on:

Press START ENGINE STOP button without depressing brake pedal.



Risk of Injury: By pressing the START ENINGE STOP button with depressing brake pedal, the engine starts!



► Audi A6 hybrid

2012 – 2015

Disconnect the negative terminals of the 12 V batteries


Option A:

Release the luggage compartment floor by means of the screws indicated by the arrows (screwdriver in the car tool kit) Disconnect the ground cables from both 12V batteries (picture on right)

Option B:

Lever up the luggage compartment floor by inserting a crowbar at the point indicated.

Lift up the luggage compartment floor. Disconnect the ground cables from both 12V batteries (picture on right)

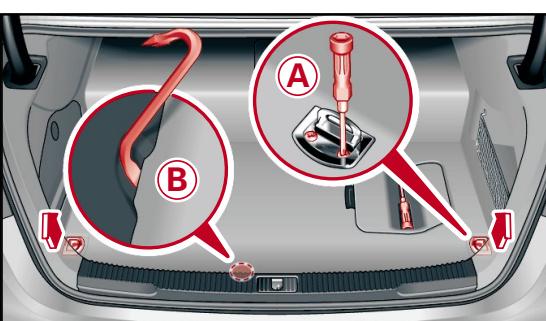

Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the high-voltage battery is located under the luggage compartment floor.

It is a Lithium-ion battery.

Identification of the remaining high-voltage components



All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.