


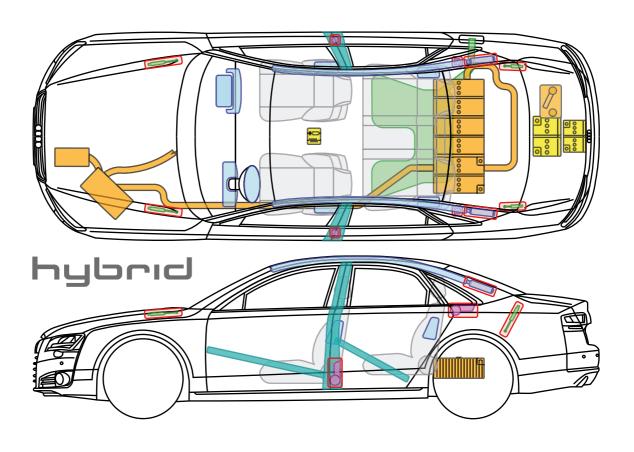


# Audi A8 hybrid

2012 - 2017



# Legend

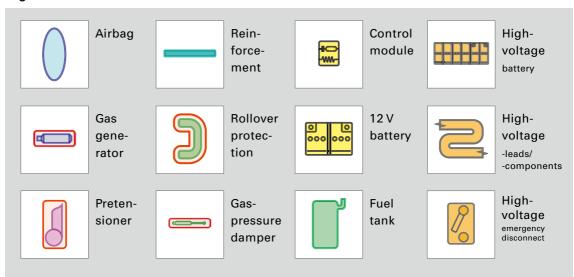







# Audi A8 hybrid

2012 - 2017

#### Identifying feature

The Audi A8 hybrid can be identified by means of the "hybrid" logo and the orange cables in the engine compartment



#### Hints



In the case of accidents in which the airbags are deployed, the high-voltage system is deactivated.

In the case of accidents with deployed/undeployed airbags

- ► Place Vehicle in Park and set parking brake
- ► Switch off the ignition
- ▶ Disconnect the negative terminals of the 12 V battery if needed

Indempentedly therefrom the high-voltage system can be deactivated by the Service-Disconnect. For this open the cover in the middle of the cargo floor in the trunk:









#### The electric motor is silent!



It may not be possible to detect that the car is ready to go by the noises it makes when in operation, as the electric motor is silent. If the large needle in the dial on the left of the instrument cluster (power metre) is not on "OFF" (for example on the "READY position), you have to expect that the electric motor may run or the internal combustion engine may start automatically.

### Switch off the ignition



## With the ignition switched on:

Press START ENGINE STOP button without depressing brake pedal.



Risk of Injury: By pressing the START ENINGE STOP button with depressing brake pedal, the engine starts!







# Audi A8 hybrid

2012 – 2017

#### Disconnect the negative terminals of the 12 V batteries

Lever up the luggage compartment floor. Lift up the tool box element. Disconnect the ground cables from both 12 V batteries (picture on right).





### Identification of the high-voltage components

Identification of the high-voltage battery



Identification of the The high-voltage battery is located under the luggage compartment floor.

It is a Lithium-ion battery.

Identification of the remaining high-voltage components





All the high-voltage leads and the high-voltage connections are provided with orange insulation. These items must not be disconnected or damaged.

