
Audi Q3


SUV/Sportback

From 2025, 5-door, 5-seater





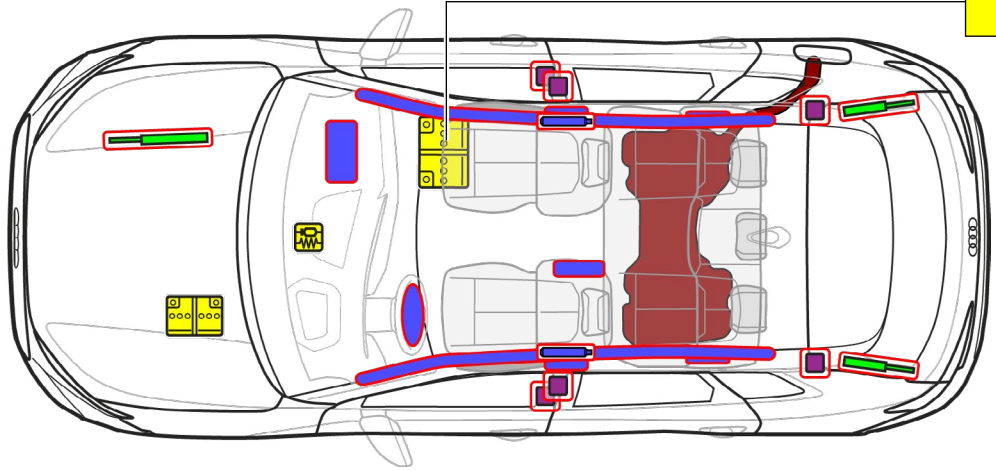

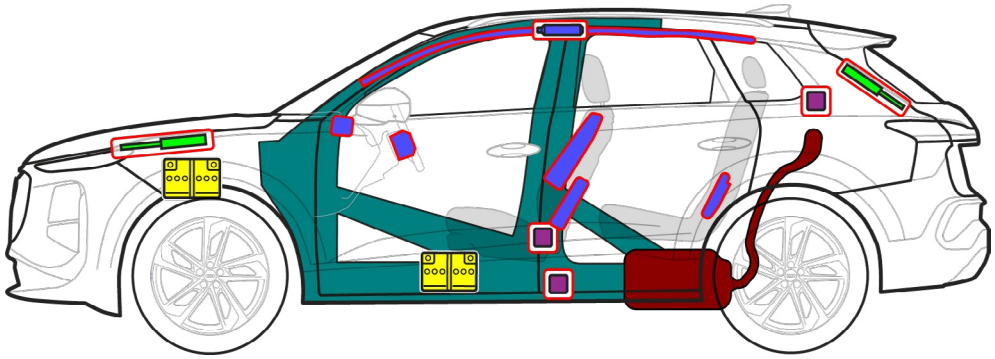

	Airbag		Stored gas inflator		Belt tensioner		SRS control unit		Gas strut / Preloaded spring
	High strength zones		Low-voltage battery		Fuel tank, petrol or diesel				

1. Identification / recognition

Model designation on B-pillar







Model designation at rear

SUV



Sportback



2. Immobilisation / stabilisation / lifting


Immobilising the vehicle

1. Press the P button on the right-hand steering column switch
2. Apply parking brake

Secure the vehicle to prevent it from rolling away



Lifting points

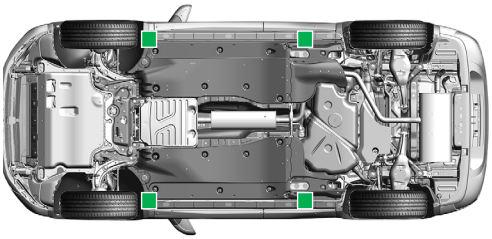


Appropriate lifting points

3. Disable direct hazards / safety regulations

Switching off the ignition




1. Press the “Start-Engine-Stop” button in the centre console without operating the foot brake.




Remove vehicle key, key card and/ or smartphone app so that they are more than 5 m away from the vehicle if possible.

Disconnecting the 12-volt vehicle battery in the engine compartment





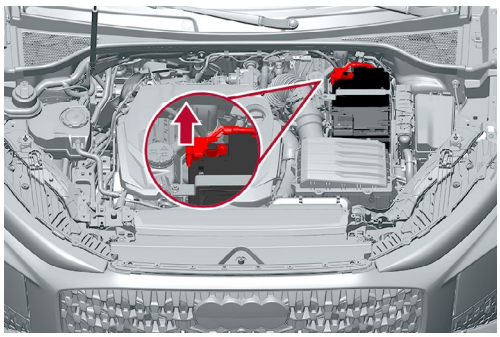

Locate the 12-volt vehicle battery
Disconnect the negative terminal (-)


Disconnecting the 48-volt battery in the passenger compartment (48-volt optional, depending on drive variant)

In the event of an accident in which the airbag is triggered, the 48-volt vehicle electrical system is automatically deactivated as soon as airbag triggering is detected.

In all other cases, the 48-volt vehicle electrical system is deactivated after approx. 10 seconds if the following procedure is followed:


1. Ignition off
2. Disconnect 12-volt vehicle battery

Procedure for completely disconnecting the 48-volt battery:

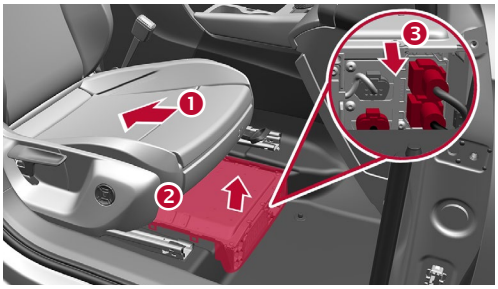

1. Move the right seat all the way back
2. Remove the battery cover in the footwell on the right side of the vehicle
3. Disconnect the connector


4. Access to the occupants

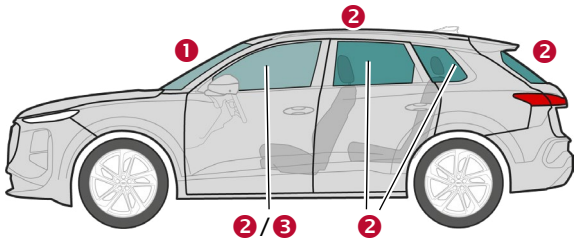

Glass types:

1. Laminated glass
2. Tempered glass
3. Laminated glass (optional)

5. Stored energy / liquids / gases / solids



max. 63 l



12 V



48 V
Lithium-ion (optional)

6. In case of fire





Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!
Wear appropriate personal protective equipment!




7. In case of submersion

After recovery, allow the water to drain and disconnect the battery/batteries (see section 3).
Wear appropriate personal protective equipment!

8. Towing / transportation / storage



Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!



9. Important additional information

Further information can be found in the Audi guideline for rescue services at www.audi.com/rescue

10. Explanation of pictograms used

 Flammable	 Corrosive, skin irritant	 Hazardous to human health	 Environmental hazard	 Fuel tank, petrol	 Fuel tank, diesel	 Use water to extinguish the fire	 Remove smart key
 Unlock bonnet	 General warning sign						